
FMINT37 Fitting Instructions

Please thoroughly read and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking skin burns or other injury.

TOOLS NEEDED:


Torx T30 with suitable drive
8mm socket with suitable drive
E12 sicket with suitable drive
Hook tool or flat head screwdriver

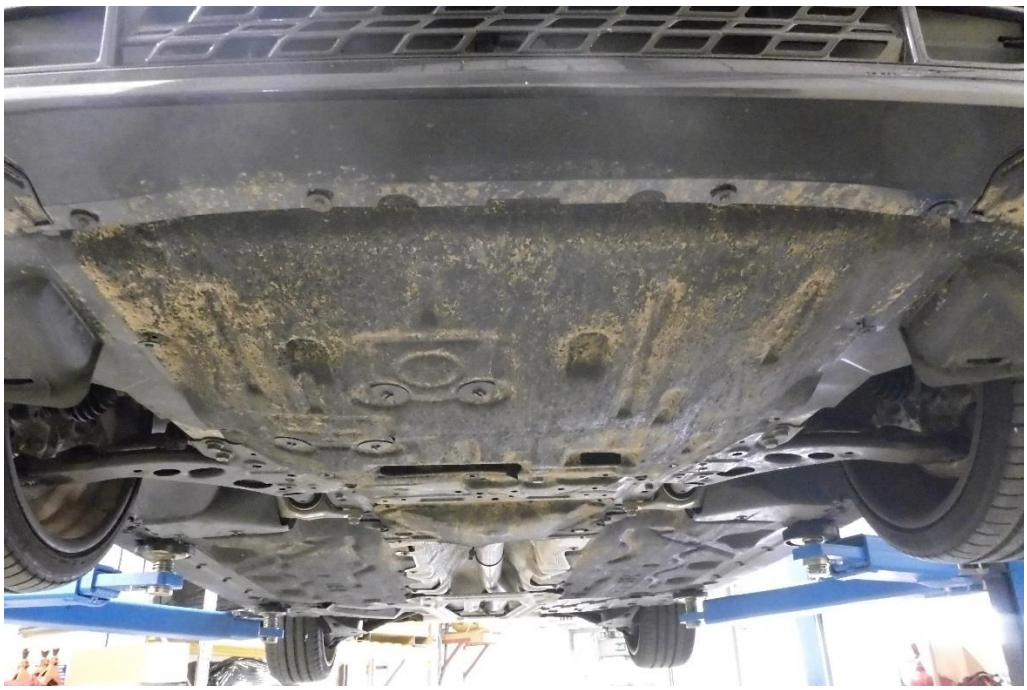

1. Using a 8mm socket and suitable drive, remove 14 fasteners to remove the undertray.



2. Using the 8mm socket and suitable drive, remove 8 more fasteners from the bottom of the bumper and inner arch on both sides

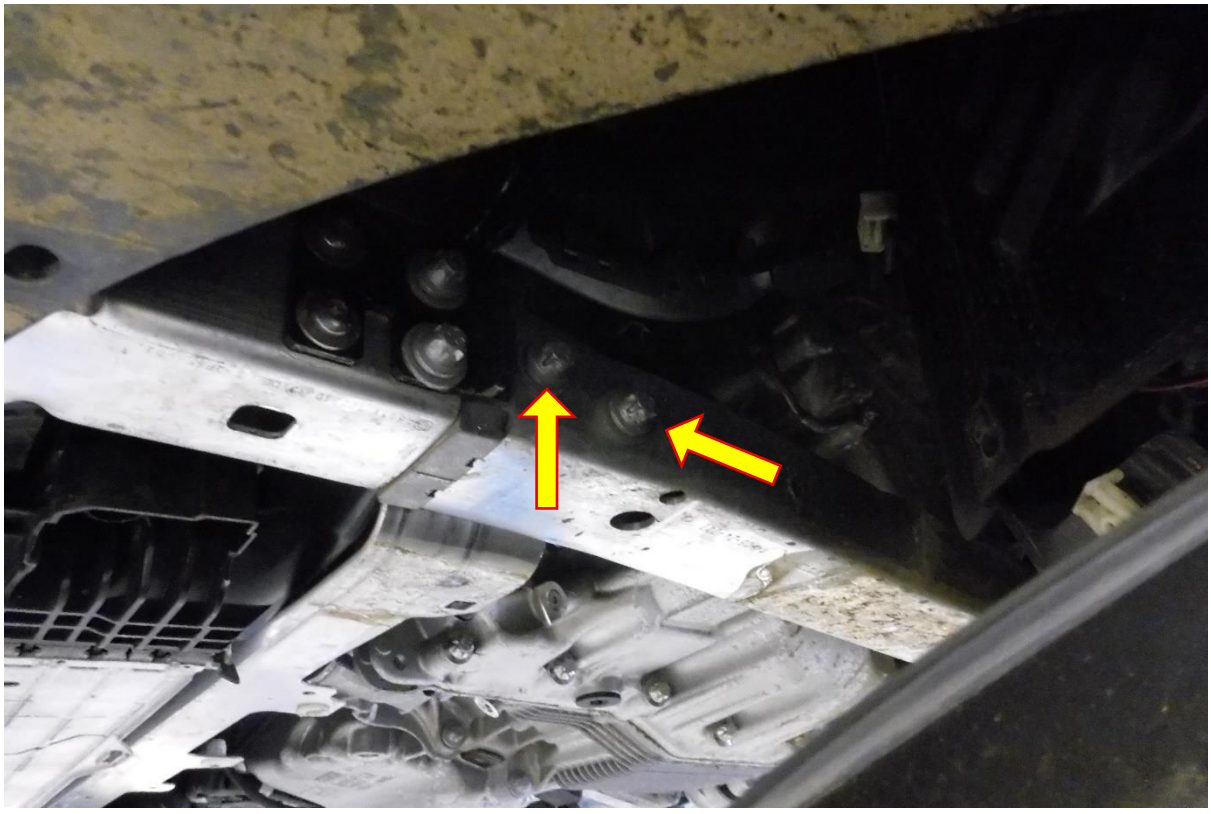

3. Using the E12 socket and suitable drive, remove the arrowed fasteners from each side and remove the Aluminium brace from the vehicle.





4. Using a Hook tool or flat head screwdriver, unclip the boost pipes from both sides of the intercooler.





5. Using the T30 and suitable drive, remove the two fasteners either side of the intercooler and carefully lower the intercooler from its mounted position.



6. Making sure the tabs line up and using the same fasteners removed in step 5, fit the Forge Motorsport intercooler and connect the boost pipes. Follow steps 1 – 3 in reverse to complete your installation.

Check out www.forgemotorsport.co.uk
and www.forgemotorsport.com
For a full range of performance products for your vehicle.

If you have any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer or you may contact us directly.

Forge Motorsport UK	*(+44)1452 380999*	*info@forgemotorsport.co.uk*
Forge Motorsport USA	*(407)-447-5363*	*sales@forgemotorsport.com*
Forge Motorsport ASIA	*+886-4-22516887*	*sales@forgemotorsport.asia*